


Cleaning Cutter Knife on a Lemur

If the cutter on the Lemur series printer is constantly cutting through adhesive media then the cutter knife will get gummed up with adhesive which will affect cutting performance.

The below reviews how to clean the cutter knife.

The following must be done with the printer powered off and unplugged from the AC Source.


- 1. Remove the cover from the printer.
- 2. You can gain access to the cutter knife via the large slots on the print cage.

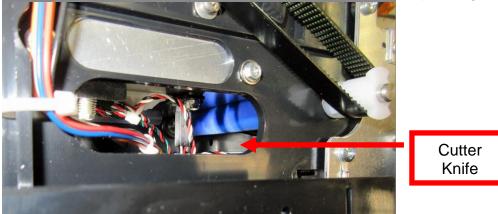

3. Adhesive buildup may be removed from the knife with a 6" wooden cotton tipped applicator and isopropyl alcohol or Goo Gone (similar product). These may be found at your local medical supply

place or online.

4. Insert the 6" applicator or swab through the large slot in the print cage.

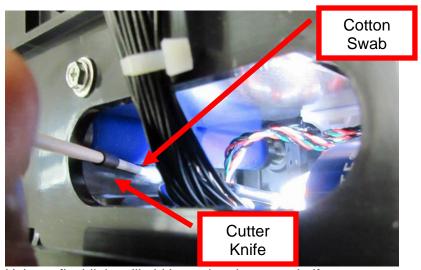

Using a flashlight will aid in seeing the cutter knife.